
The gearbox

The lubrication of the hollow propeller shaft
... how the propeller shaft is lubricated without contact.

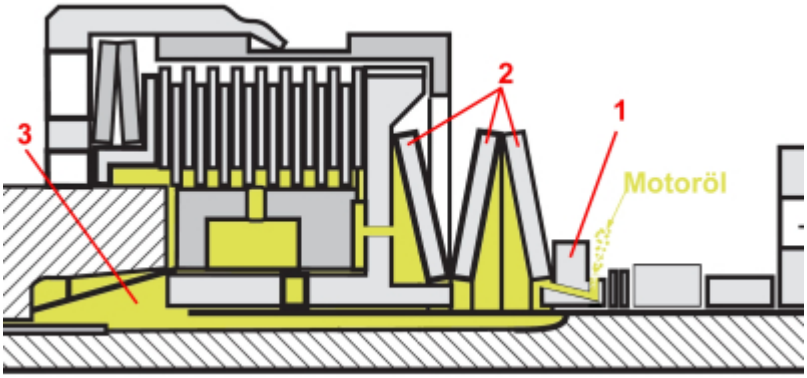

How to properly lock the crankshaft with the locking screw
... and how this helps you avoid having to disassemble the engine.

THRUST WASHER 33.2/51/1.2 P/N:827992
The plastic thrust washer in the gearbox between the CLAW WHEEL and the DRIVE WHEEL 29 T

From:
https://www.kleinjung.de/rotax/ - **Ralle's ROTAX FAQ**

Permanent link:
https://www.kleinjung.de/rotax/doku.php?id=en:transmission

Last update: **09.11. 2026 18:47**